

Colour Change Controller Button

SKU: HTSS21BNG

Please read the **Information for Use** carefully before first use. This Information for Use contains necessary safety advice and user instructions, follow the instructions on how to operate. Retain this Information for Use for future reference.

WARNINGS:



Adult supervision required



This is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:

- Do not expose the Controller Button to water, humidity or extreme heat.
- Always use the USB cable included and a certified 5V adaptor for charging.
- Avoid pressing multiple buttons simultaneously to ensure proper signal transmission.
- When not in use for extended periods, power off the Controller Button and store in a dry place.
- Do not disassemble the Controller Button or attempt to modify its internal components.
- This product is for INDOOR USE only.

Good to know:

- Powered by a rechargeable 5V battery.
- A built-in USB port enables easy and convenient charging, taking 4 hours to fully charge.
- A single charge will deliver up to 48 hours of continuous use.
- Features five vibrant colour buttons (red, green, blue, yellow and white) and an auto-colour changing mode button with a hand icon.
- Dimensions – Diameter: 30cm; Height: 12cm.
- Made from acrylic.

How to use:

- The Controller Button operates wirelessly. To ensure a stable wireless connection, keep the Controller Button within a 10 metre range of the Lighting Device.
- Press the coloured buttons to change the colour of the lights in your Bubble Tube or Light Column to match the button pressed.
- Press the button with a hand icon to start auto-colour changing mode.
- Turn the central speed dial to adjust the speed of lighting transitions for a dynamic visual experience.

Care instructions:

- Wipe gently with a soft, dry cloth.

Troubleshooting:

- **No response from lights:**
 - Ensure the Controller Button is fully charged.
 - Check the distance between the Controller Button and the Bubble Tube or Light Column. Stay within 10 meters.
 - Make sure the Bubble Tube or Light Column is powered on and paired with the receiver.
- **Buttons not working properly:**
 - Recharge the Controller Button if the battery is low.
 - Avoid pressing multiple buttons simultaneously.
 - Try restarting the Controller Button by powering it off and back on.
- **Colour does not match button pressed:**
 - Turn the Controller Button off, wait a few seconds, and restart.
 - Check if the Bubble Tube or Light Column supports the selected colour mode.
- **Speed dial not changing lighting speed:**
 - Ensure the Controller Button is in auto-colour changing mode.
 - Gently rotate the central dial, avoid applying excess force.

**UK
CA**

Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.
www.sensorydirect.com