

Remote Colour Cube

SKU: HTS41BNG

Please read the Information for Use carefully before first use. This Information for Use contains necessary safety advice and user instructions, follow the instructions on how to operate. Retain this Information for Use for future reference.

WARNINGS:



Adult supervision required



This is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:

- Do not submerge the internal electronic components in water.
- Store in a cool, dry place when not in use.
- This product is for INDOOR USE only.

Good to know:

- Powered by 2 x 1.5V AAA Batteries (not included).
- Dimensions – (W) 30cm x (H) 30cm x (D) 30cm.
- Features a hidden zipper panel, inside which contains the battery-powered control unit.
- The Remote Colour Cube's outer cover is made from wipe clean, PVC, and the inner is hardened EVA foam.

How to use:

- Simply throw or turn the Remote Colour Cube, the top-facing colour is detected and wirelessly transmits to the Bubble Tube or Light Column to match the colour shown.
- When the multi-coloured side faces up, it triggers a colour-changing mode adding a dynamic effect to your environment.

How to change battery:

1. To replace the batteries, locate the side of the Remote Colour Cube with the zipper and unzip it.
2. In the centre, you will find a removable foam pad. Lift the foam pad to reveal a black control box.
3. Open the control box to access the two AAA batteries. Replace the old batteries with new ones, making sure to follow the polarity markings shown inside the compartment.
4. After inserting the new batteries, place the black control box into the foam cutout, align it properly, close the foam pad, zip up the Remote Colour Cube, and it is ready to use again.

Information for Use



Care instructions:

- To clean the surface, wipe gently with a damp cloth and mild soap (if needed).
- Avoid using alcohol or abrasive cleaners.
- The outer cover is detachable – you can unzip and remove it for more thorough cleaning.
- Make sure the surface is completely dry before reassembling.

Troubleshooting:

- If the Remote Colour Cube is not controlling any lights, the batteries may be depleted. Please replace both AAA batteries.
- If the Remote Colour Cube still doesn't work after replacing the batteries, the internal circuit board may be damaged. Please contact us for assistance.
- If the colour control does not match the top-facing side, open the battery compartment and ensure it is correctly placed back into the foam cutout according to the polarity label and directional markings.

**UK
CA**

Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of
Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.
www.sensorydirect.com