

Vibrating Sensory Teether

SKU: VISTT25BNG

Please read the Information for Use carefully before first use. This Information for Use contains necessary safety advice and user instructions, follow the instructions on how to operate. Retain this Information for Use for future reference.

WARNINGS:



Adult
supervision
required

Important:

- The Vibrating Sensory Teether is NOT a chew toy and should not be given to those that bite and chew.
- The Vibrating Sensory Teether comes with a USB charger but NOT an adaptor/plug.
- Check before use, discontinue using if showing signs of wear and tear.

Good to know:

- Features three vibrating settings.
- USB fast charging – no batteries to replace.
- Made with 100% food grade silicone - non-toxic and safe, free from BPA, phthalates and latex.
- Durable and flexible.
- Water resistant and easy to clean.
- Dimensions – Diameter: 12cm; Depth: 2.5cm.

How to use:

- Please charge the Vibrating Sensory Teether before use.
- To charge, insert the charger through the small dimple on the back of the Vibrating Sensory Teether, above the DC indicator. A light will flash to indicate charging.
- Once the Vibrating Sensory Teether is charged, press and hold the power button for 3 seconds to turn on. Press the power button to shuffle through the three different vibration settings.

Care instructions:

- Wipe clean with a soft, damp cloth or rinse under warm water. Do not use abrasive cleaners, bleach, solvents or chemicals. Do not submerge into water. Dry thoroughly after cleaning.
- Do not leave in direct sunlight.
- Store in a cool and dry environment.



Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of
Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.
www.sensorydirect.com