

Pop-Up Blackout Sensory Den

SKU: TSC90CUBNEW / TSC80CUSM

Please read the Information for Use carefully before first use. This Information for Use contains necessary safety advice and instructions. Retain this Information for Use for future reference.

WARNINGS:



Keep away
from fire



Adult
supervision
required

Important:

- Age 3 years+
- The assembly and storage of the Pop-Up Den should always be carried out by a responsible adult.
- Be aware that the Den may pop open under its own sprung tension.

How to assemble:

1. Remove the Pop-Up Den from the case, holding on to it firmly until you are ready to unfold it.
2. Let go of the Pop-Up Den and stand well back.
3. While the Pop-Up Den is flat, gently open it up, reach inside and pull the Pop-Up Den out. Hold on firmly whilst you do this.
4. Your Pop-Up Den is now ready to use.



Information for Use



How to fold away:

1. Make sure the window and door are open to ensure no air is trapped inside.
2. Tip the Pop-Up Den so the door is facing towards the ceiling.
3. Put your knee on the side of the Pop-Up Den, push the whole side forward so you are folding it in on itself, making sure the corners are tucked in. The Pop-Up Den should then fold in half.
4. Tuck the ceiling and the floor in. Make sure the floor is facing you.
5. Take the bottom left-hand corner and fold it towards the top left-hand corner. It should start to fold into small circles which will fold in on themselves.
6. Place back in the case.



Care instructions:

The Pop-Up Den cover is made from 100% nylon and has a 100% steel frame.

- Wipe clean with a damp cloth.
- Do not use abrasive materials or chemical solutions.
- Ensure fabric is dry before storage.



Made in China

Imported by Bing International Ltd, Unit 14 Elgar Business Centre, WR2 6NJ on behalf of
Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ UK.
www.sensorydirect.com