

Bubble Tube with Remote – 120cm

SKU: MNG120BUB

Please read the Information for Use carefully before first use. This Information for Use contains necessary safety advice and user instructions, follow the instructions on how to operate. Retain this Information for Use for future reference.

Contents in the box:

- | | |
|--------|---------------------------|
| ❶ Lid | ❷ Power Cable and Adaptor |
| ❸ Tube | ❹ Remote Control |
| ❺ Base | ❻ Floating Fish x 8 |

Before you begin:

- Inspect the tube to make sure that there are no cracks or damage. Take extreme caution when handling, as the tube is a fragile product.
- Check the contents and ensure all items are present and correct.
- Keep all packaging until after a successful installation.

WARNINGS:



Adult supervision required



Keep batteries away from children



This product is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:

- Ensure the Bubble Tube is situated on a flat, stable surface and in a location where it does not present a hazard and cannot be knocked over.
- We recommend using distilled water as the Bubble Tube will stay clean for longer. Tap water may cause water discolouration.
- Do not operate with hot or ice-cold water.
- Do not lift, carry or pull the Bubble Tube by the power cable.
- Do not attempt to move the Bubble Tube when filled with water.
- Not suitable for live fish.
- Switch OFF the mains power socket when not in use.
- The remote control contains a coin battery which can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention
- If the power cable or unit are damaged, discontinue use immediately.
- Disconnect and drain the water if storing away for an extended period.
- This Bubble Tube is suitable for INDOOR USE only.

Information for Use

Good to know:

- The Bubble Tube requires approximately 7.6 litres of water to fill to the recommended level.
- The flow rate of the bubbles cannot be adjusted.
- The LED bulbs are non-replaceable.
- The Bubble Tube is not touch reactive.
- Some noise and vibration from the Bubble Tube is expected. Those very sensitive to noise may find the noise and vibration from the Bubble Tube triggering.

Specification:

Power:	Input Output	100-240V – 50-60Hz 5V DC, 1000mA
Dimensions:	Tube Base	(H) 120cm x (Dia.) 10cm (H) 20cm x (W) 20cm
Material:	Tube Base	PETG ABS


WARNING: DO NOT open the Unit. There are no user serviceable parts.

Installation and operation:

- Position the Bubble Tube in the location you want it to stand, as it will be too heavy to move once it has been filled with water. Ensure the Bubble Tube is situated on a flat, stable surface.
- Fill the Bubble Tube with water (preferably distilled water) to the maximum fill line. Do not overfill the Bubble Tube.
- Wash the fish with warm water and place the fish in the Bubble Tube. Place the lid on top. Remember that it can take up to 24 hours for the fish to fully swim.
- Plug the power cable into the base unit and plug the adaptor into the wall. Switch on the mains power socket.

Remote control:

- (1&2) **Brightness:** Increases or decreases the light brightness.
- (3&4) **Power button:** Turns the Bubble Tube on and off.
- (5) **Colour Selection:** Selects one of the three colours to remain static.
- (6) **Flash:** Scrolls through the colours automatically.
- (7) **Strobe:** Activates the strobe effect which scrolls through the colours at a slower pace than (6) Flash.
- (8) **Fade:** Fades in and out of the different colours.
- (9) **Smooth:** Fades in and out of the different colours at a slower pace than (8) Fade.

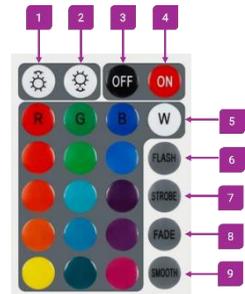

Care instructions:

- Always unplug the Bubble Tube from the mains power socket before cleaning and handling.
- To clean the surface, wipe gently with a soft cloth.
- To clean the inside, use a cloth with warm soapy water. Rinse the Bubble Tube thoroughly to remove all soap residue, then refill with fresh water.

Information for Use



- Do not use abrasive cleaners or tools that could scratch the Bubble Tube.
- Do not use bleach or other harsh chemicals.
- Periodically inspect the Bubble Tube for leaks.

Troubleshooting:

- **Tube is cracked:** If the tube is cracked, please contact us for assistance.
- **Fish not swimming:** It can take up to 24 hours for the fish to fully swim. If none or only a few of the fish are swimming, remove them and wash them in warm water.
- **Water appears cloudy or green:** Add a small amount of algaecide (not included). Consider replacing the water if it has been in the Bubble Tube for more than 4-6 weeks. Clean the interior of the Bubble Tube if needed.
- **Remote control not functioning:** If the lights are on but they are not changing with the click of the remote control, try going a little closer to the base of the Bubble Tube. If it still does not work, please change the battery.

Warranty information:

- Our Bubble Tubes are made with the highest quality materials. In the event that a Bubble Tube does not have our usual standard of excellence, we will repair or replace it, at our discretion, within 12 months from the date of purchase.
- A valid proof of purchase, with the purchase date clearly indicated, must be provided.
- Photos of defective Bubble Tubes may be required to help us evaluate the cause of the defect.

Water damage:

- This Bubble Tube is not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within the Bubble Tube will cause damage and is not covered under the warranty.
- The use of "hard water" and/or caustic cleaners can affect the finish of the Bubble Tube.
- Failure to keep the unit clean, and use of additives/cleaners, will also void the warranty.

Not covered under the warranty:

- The warranty will NOT cover cases of damage due to inadequate care, and/or neglect, immersion in water or improper installation, storage or maintenance.
- This warranty will NOT cover damage by accident, misuse, negligence or if modifications have occurred.
- This warranty does NOT cover any additional charges for installation, removal, disposal, shipping costs or consequential damage associated with any warranty claim.

**UK
CA**

Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.
www.sensorydirect.com