

## Classroom Visual Timer

SKU: GH2309BNG

Please read the Information for Use carefully before first use. Retain this Information for Use for future reference.

### WARNINGS:



Adult supervision required



Keep batteries away from children



This product is not a toy


### Important:

- Ensure the battery compartment is closed before use.
- Batteries should be replaced by a responsible adult.
- Periodically inspect batteries for signs of leakage.

### Good to know:

- Powered by 2 x 1.5V AA batteries (not included).
- Dimensions – (W) 20cm x (H) 20cm x (D) 3.7cm.
- Net weight – 371.4g
- Made from ABS Plastic.

### How to use:

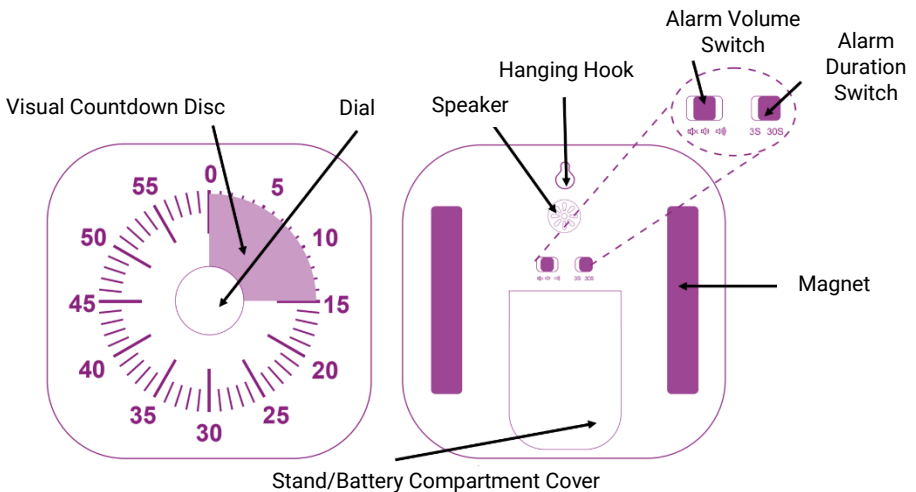

# Information for Use

## To set the Classroom Visual Timer:

- Turn the dial clockwise to the desired time interval, this will start the Classroom Visual Timer.
- Do not turn the dial anticlockwise when the visual countdown disc is on the 0 position – this will damage the clockwork.

## Alarm duration and volume:

- There are two alarm duration settings:



3S = 3 seconds.

3S 30S

30S = 30 seconds.

- There are three volume settings:



= Quiet mode/mute.



= Low volume.



= High volume.

## Batteries:

- To insert the batteries, lift the stand/battery compartment cover and open the battery compartment.
- Insert the batteries, ensuring they are connected properly.
- Close the battery compartment and the stand/battery compartment cover.
- When the battery level is low the Classroom Visual Timer will emit a fast DA DA DA sound.

## Care instructions:

- Wipe gently with a soft dry cloth.
- Do not submerge in water.
- Store in a cool dry location.



Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of  
Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.  
[www.sensorydirect.com](http://www.sensorydirect.com)