

Corner Sofa Kit with Bubble Tube (150cm) and Fibre Optic Tails

SKU: HTS17RBNG

Please read the Information for Use carefully before first use. This Information for Use contains necessary safety advice and user instructions, follow the instructions on how to operate. Retain this Information for Use for future reference.

Contents in the cartons:

- | | |
|----------------------------------|---------------------------------------|
| ❶ Corner Sofa | ❸ Fibre Optic Light Source Unit – 16W |
| ❷ Bubble Tube (150cm) | ❹ Remote Control |
| ❸ Fibre Optic Tails (100) – 1.5m | ❺ Information for Use |

Before you begin:

- Unpack the contents of the cartons carefully and check that all items listed above are present and correct.
- Keep all packaging until after a successful installation.

Corner Sofa

WARNINGS:



Adult supervision required



This is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:

- This product is suitable for INDOOR USE only.

Good to know:

- Fully assembled.
- Hinge lid opening for easy access.
- Front and side round holes in base for easy set-up.
- Dimensions - Radius: 80cm; Height: 30cm.
- Covered in white PU Leather.

Care instructions:

- Wipe clean with a damp cloth.

Made in China

Bubble Tube (150cm)

Contents in the box:

- | | |
|---|---------------------------------|
| ❶ Lid | ❺ Floating Fish x 10 |
| ❷ Tube with Integrated Base | ❻ Maintenance Hose ³ |
| ❸ Controller Box ¹ with Adaptor/Power Cable ² | ❼ Manual Pump ³ |
| ❹ Air Pump with Adaptor/Power Cable ² | |

¹ Attached to tube within integrated base.

² The air pump and controller box both come with an adaptor. The adaptor fittings and cables are unique to each item. Please ensure you use the correct one for the related item.

³ Maintenance hose and manual pump included for emptying water. Not required for set up.

Before you begin:

- Unpack the contents of the box carefully and check that all items listed above are present and correct.
- Inspect the Bubble Tube to make sure that there are no cracks or damage. Take extreme caution when handling, as the tube is a fragile product.

WARNINGS:



Adult supervision required



Keep batteries away from children



This product is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:


- Although this Bubble Tube works with tap water, we recommend using distilled water as the Bubble Tube will stay clean for longer.
- Do not operate with hot or ice-cold water.
- Do not attempt to move the Bubble Tube when filled with water.
- Not suitable for live fish.
- Switch OFF at the mains power socket when not in use.
- The remote control contains a coin battery which can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Disconnect and drain the water if storing away for an extended period.
- If the power cables or unit are damaged, discontinue use immediately.
- Do not exceed the maximum voltage and wattage on the adaptors.
- This Bubble Tube is suitable for INDOOR USE only.

Information for Use

Good to know:

- Power input - 12V-1.8A
- Dimensions – Height: 150cm; Diameter: 15cm.
- The Bubble Tube requires approximately 22 litres of water.
- Made from acrylic.
- Operated by remote control.
- Some noise and vibration from the Bubble Tube is expected. Those very sensitive to noise may find the noise and vibration from the Bubble Tube triggering.
- An air flow adjustment valve is attached to the air tube to alter the flow rate of the bubble stream – this will also adjust the noise level of the air pump.
- The air pump is not fixed into position and is attached to the Bubble Tube via a tube which enables the air pump to be located outside of the Corner Sofa, away from the Bubble Tube to reduce the noise level, if preferred.

Remote control functions:

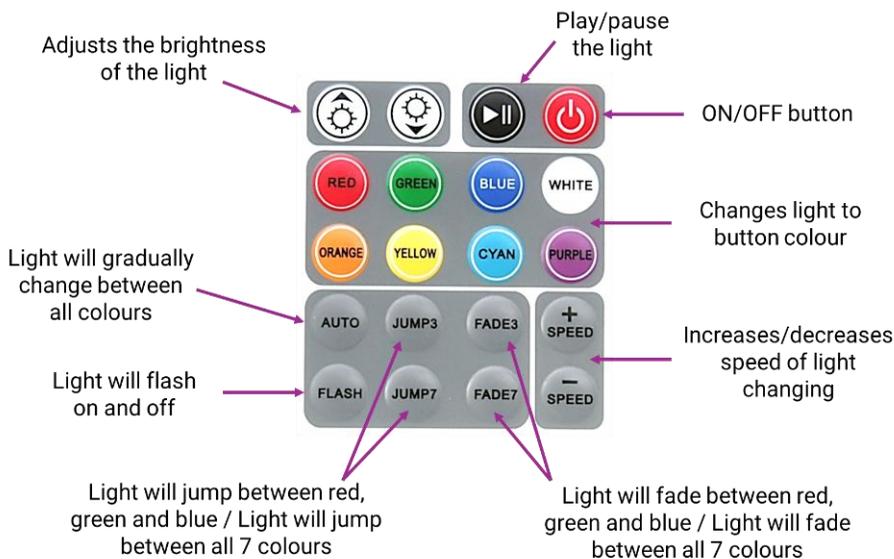

Care instructions:

- Always unplug the adaptors from the mains power socket before cleaning and handling.
- To clean the surface of the Bubble Tube, wipe gently with a soft cloth.
- To clean the inside, use a cloth with warm soapy water. Rinse the Bubble Tube thoroughly to remove all soap residue, then refill with fresh water.
- Do not use abrasive cleaners or tools that could scratch the acrylic.
- Do not use bleach or other harsh chemicals.

Emptying water for maintenance and storage:

- Always unplug the adaptors from the mains power socket before emptying the Bubble Tube.
- A maintenance hose and manual pump are provided to aid in emptying the Bubble Tube. The maintenance hose is supplied as one continuous piece and will need to be cut based on the length required (one length must be able to reach the bottom of the Bubble Tube and the other length to reach the equipment used to collect the water e.g. large bucket / bowl).
- Attach the maintenance hose (intake) to the nozzle closest to the handle on the manual pump and place the other end of the maintenance hose deep into the Bubble Tube.
- Attach the maintenance hose (output) to the bottom nozzle on the handle of the manual pump and place the other end into the equipment on the floor (or at a lower point than the end of the maintenance hose) and start pumping until the water starts flowing.

Troubleshooting:

- **Bubble Tube is cracked:** If the Bubble Tube is cracked, please contact us for assistance.
- **No bubbles coming out:** Inspect for any kinks or blockages in the tubing. Make sure the water level is sufficient. If the air pump is not making noise and the lights are not working, please check that you have completed the set up instructions. If the connection is correct, but the air pump is still not making any noise, please contact us for assistance.
- **Bubbles coming out slowly:** Check the air flow adjustment valve is turned up high enough.
- **Fish not swimming:** It can take up to 24 hours for the fish to fully swim. If none or only a few of the fish are swimming, the air flow may not be high enough. We suggest altering the air flow adjustment valve to increase the flow rate of the bubble stream.
- **Water appears cloudy or green:** Add a small amount of algaecide (not included). Consider replacing the water if it has been in the Bubble Tube for more than 4-6 weeks. Clean the interior of the Bubble Tube if needed.
- **Unusual noise from the air pump:** Check the air pump is placed on a stable and flat surface. Ensure the air vents are not blocked. Check for debris inside the pump or tubing.
- **Remote control not functioning:** If the lights are on but they are not changing with the click of the remote control, try going a little closer to the base of the Bubble Tube. If it still does not work, please change the battery.
- **No power:** First, touch the controller box adaptor and see if it feels warm. If it is cold, contact Customer Services for a new controller box adaptor. If the controller box adaptor is warm, check the connection into the controller box by removing and reinserting it and press the "ON" button on the remote control. If this still does not resolve the problem, please contact us for assistance.
- **Hardened or creased maintenance hose:** If the maintenance hose becomes hardened or creased (due to storage or cold weather), submerge the maintenance hose in warm water for 3-4 minutes, the maintenance hose should become malleable and easier to use.

Information for Use



Warranty information:

- Our Bubble Tubes are made with the highest quality materials. In the event that a Bubble Tube does not have our usual standard of excellence, we will repair or replace it, at our discretion, within 12 months from the date of purchase.
- A valid proof of purchase, with the purchase date clearly indicated, must be provided.
- Photos of defective Bubble Tubes may be required to help us evaluate the cause of the defect.

Water damage:

- This Bubble Tube is not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within the Bubble Tube will cause damage and is not covered under the warranty.
- The use of "hard water" and/or caustic cleaners can affect the finish of the Bubble Tube.
- Failure to keep the unit clean, and use of additives/cleaners, will also void the warranty.

Not covered under the warranty:

- The warranty will NOT cover cases of damage due to inadequate care, and/or neglect, immersion in water or improper installation, storage or maintenance.
- This warranty will NOT cover damage by accident, misuse, negligence or if modifications have occurred.
- This warranty does NOT cover any additional charges for installation, removal, disposal, shipping costs or consequential damage associated with any warranty claim.

**UK
CA**

Made in China

Fibre Optic Tails (100) – 1.5m

WARNINGS:



Adult supervision required



This is not a toy

THE FIBRE OPTIC TAILS CONTAIN LONG CORDS WHICH COULD CAUSE STRANGULATION.
THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.
DO NOT LEAVE UNATTENDED WHILST IN USE.

Important:

- Never pull the Fibre Optic Tails forcefully – They guide light but are not structural.
- This product is suitable for INDOOR USE only.

Good to know:

- 100 glowing Fibre Optic Tails.
- Dimensions – Length: 1.5m; Diameter: 4mm.
- Made from PMMA and covered with a durable protective PVC sleeve.
- The Fibre Optic Tails do not get hot or emit heat from the transmission of light and are safe to touch and handle.
- Energy efficient – 16W low power consumption.
- Fibre Optic Light Source Unit required for illumination.

Care instructions:

- If the Fibre Optic Tails are connected to the Fibre Optic Light Source Unit, power off and unplug before cleaning and maintenance.
- Dust removal - Gently wipe with a soft microfibre cloth (dry or slightly damp). Use a soft brush (e.g. make-up brush) for delicate fibres. Do not use abrasive cleaners.
- Fibre straightening - If fibres bend or tangle, carefully straighten by hand; avoid sharp folds to prevent light transmission loss.

Long term maintenance:

- Every 6 months - Inspect fibre ends for fraying (trim if needed with sharp scissors).
- Storage - Coil the Fibre Optic Tails loosely; avoid compression.



Made in China

Fibre Optic Light Source Unit – 16W

WARNINGS:



Adult supervision required



Keep batteries away from children



This product is not a toy

THE SUPERVISION OF AN APPROPRIATE ADULT IS REQUIRED AT ALL TIMES.

DO NOT LEAVE UNATTENDED WHILST IN USE.


Important:

- If the power cable or Fibre Optic Light Source Unit are damaged, discontinue use immediately.
- Do not exceed the maximum voltage and wattage on the adaptor.
- Do not expose to water or excessive moisture.
- Avoid blocking ventilation openings.
- Switch OFF the mains power socket when not in use.
- The remote control contains a coin battery which can cause severe or fatal injuries in as little as two hours if it is swallowed or placed inside any part of the body. If you think the battery may have been swallowed or placed inside any part of the body, seek immediate medical attention.
- This product is suitable for INDOOR USE only.

Good to know:

- Power Input – 12V-2A
- Dimensions – Height 3.5cm; Length: 14cm; Width: 8.5cm.
- Colour output - RGB LED.
- Energy efficient – 16W power.
- Can be controlled manually, via remote control or by Bluetooth mobile App.

Remote control functions:

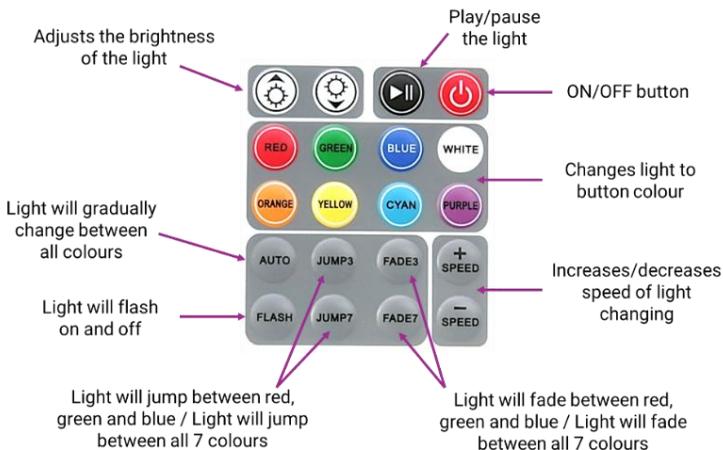

Mobile App control:

- Simply scan the QR code on the Fibre Optic Light Source Unit to download the mobile App.
- Connect via Bluetooth to control light colours, brightness and auto-colour changing mode directly from your mobile device.

Care instructions:

- Power off and unplug before cleaning and maintenance.
- Gently wipe the exterior of the Fibre Optic Light Source Unit with a soft, dry microfibre cloth. Do not use abrasive cleaners.
- Ensure the fibre optic port is free from dust and debris to maintain optimal light output. Use a soft brush (e.g. make-up brush) if necessary.
- Periodically check all power and fibre optic connections to ensure they are secure.
- If storing the Fibre Optic Light Source Unit for an extended period, disconnect from power and store in a cool, dry place.

Troubleshooting:

- **Lights not turning on:**
 - Check if the power source is active and working.
 - Inspect the 12V adaptor and the power cable for damage
 - Ensure that the power adaptor is securely connected to the Fibre Optic Light Source Unit.
- **Dim lights/Flickering:**
 - Ensure the Fibre Optic Tails are connected securely to the Fibre Optic Light Source Unit.
 - Inspect the Fibre Optic Light Source Unit for dust build-up – clean gently with a soft, dry microfibre cloth.
 - Ensure no fibres are severely bent or broken.
- **Colour inconsistency:**
 - Check all fibres are evenly inserted into the Fibre Optic Light Source Unit.
 - Reset the remote control / re-pair with the Fibre Optic Light Source Unit.
- **Remote Control not functioning:**
 - Check the batteries are installed correctly.
 - If installed correctly and the remote control is still not working, replace the batteries.
- **Mobile App not connecting:**
 - Check Bluetooth is enabled on your mobile device, and the Fibre Optic Light Source Unit is powered on.
 - Close and reopen the App.
 - Restart your phone and switch the Fibre Optic Light Source Unit off and on again.

Installation and Operation:

- Situate the Corner Sofa in your chosen location.
- Open the hinged lid and commence assembly of the Corner Sofa kit.
- Place the Fibre Optic Light Source Unit inside the Corner Sofa base in any suitable position. Run the Fibre Optic Tails through the curved opening (at the front) and connect to the Fibre Optic Light Source Unit.
- Run the power cable of the Fibre Optic Light Source Unit through the opening at the side (closest to mains power source).
- Insert the Bubble Tube into the centre hole, making sure the Bubble Tube rests securely in the recessed round opening on the base of the Corner Sofa.
- Place the air pump inside the Corner Sofa base in any suitable position then connect the tube from the Bubble Tube to the air pump.
- Run the power cable for the air pump through the opening at the side (closest to mains power source) and connect to the air pump inside the Corner Sofa base.
- Run the controller box power cable through the opening at the side (closest to mains power source) and plug into the power port on the controller box.
- Add water until the Bubble Tube is about 10% full.
- Plug the adaptors into the mains power socket and test the Bubble Tube with the remote control. Check that the Bubble Tube is working properly. It is working properly if the lights turn on and the air pump is creating air bubbles.
- Switch off power to the Bubble Tube and fill the Bubble Tube until the water is about 2 inches from the top or to the recommended maximum fill line.
- Wash the fish with washing up liquid and warm water then rinse off with cold water, making sure all washing up liquid has been removed.
- Place the fish in the Bubble Tube and place the lid on top. Remember that it can take up to 24 hours for fish to fully swim.
- Switch the power back on for the Bubble Tube.
- Plug the Fibre Optic Light Source Unit into the mains power socket and switch on the power.
- Your Corner Sofa Kit is now complete and ready to enjoy.

Tip: To manage the adaptors efficiently, consider placing a surge-protected extension lead inside the Corner Sofa base. Plug all the adaptors into this extension lead, then feed the main power cable through the side opening of the Corner Sofa base (closest to your mains power socket). Once everything is connected inside, simply switch the extension lead on at the mains.

