

# Information for Use

## Digital Visual Timer

SKU: GH2408BNG

Please read the Information for Use carefully before first use. Retain this Information for Use for future reference.

### WARNINGS:



Adult supervision required



This is not a toy


### Important:

- Always use a TYPE-C USB cable (included) with a 5V1A adaptor for charging (not included).
- Do NOT use the Digital Visual Timer with the USB cable plugged in for long periods of time.
- Excessive charging and prolonged low battery shutdown may cause damage to the battery and prevent further charging.

### Good to know:

- Powered by a rechargeable battery.
- A built-in USB port enables easy and convenient charging, taking approximately 3-4 hours to fully charge.
- After the Digital Visual Timer is fully charged, charging will automatically stop and the battery icon on the screen will disappear.
- Dimensions – (W) 10.5cm x (H) 8.5cm x (D) 3.5cm.
- Net weight – 136.2g
- Made from ABS.

### How to use:

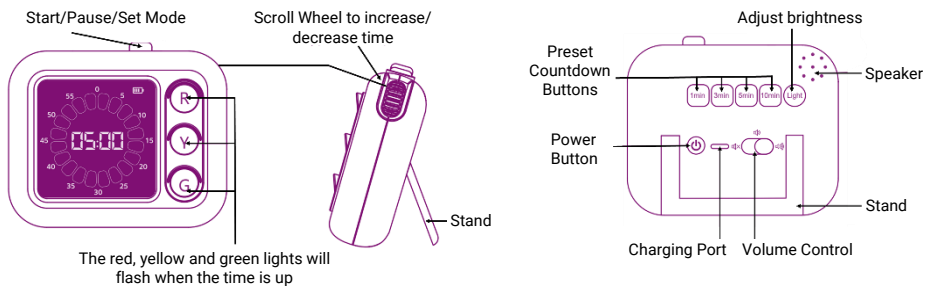

### Controls:


- **Brightness adjustment:** Short press the Light button to switch screen brightness.
- **Turn ON/OFF:** Short press the Power button to start the Digital Visual Timer. Press and hold the Power button to turn off the Digital Visual Timer.

# Information for Use

- **Volume adjustment:** There are three levels of volume, mute, low volume, high volume. Slide the Volume Control button to the corresponding volume.
- **USB Charging Port:** Insert the TYPE-C USB charging cable, ensure you use a 5V1A power adaptor for charging.

## Screen Display:

- **Battery level display area:** When the battery icon is displayed on the screen, this indicates the battery is low and will need charging. When charging the screen displays the battery icon and the number of battery cells flash as the battery level increases. The battery icon disappears when fully charged.
- **Digital time display area:** Accurately displays the amount of time remaining.
- **Visual timing display area:** Composed of 20 grids, each grid disappears or displays over time. Visualise time and intuitively determine the remaining amount of time.

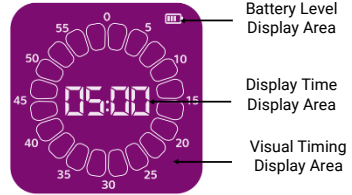

## Operation of the Digital Visual Timer:

- Press the Power button on the back of the Digital Visual Timer, and the screen will start displaying.
- Set the Digital Visual Timer. The default display is 00:00. There are two options available to set the countdown.
  - **Option 1:** Slide the Scroll Wheel to set the countdown. Slide down to increase the time, slide up to decrease the time.
  - **Option 2:** There are four Preset Countdown buttons on the back of the Digital Visual Timer for 1 minute, 3 minutes, 5 minutes and 10 minutes. Press on the time you want, and the screen will display the corresponding time.
- Press the Start/Pause button at the top of the Digital Visual Timer to start the countdown.
- To pause the Digital Visual Timer during the countdown, short press the Start/Pause button; to resume the countdown, short press the Start/Pause button again.
- To reset the time to 00:00, long press the Start/Pause button.
- There are three types of lighting prompts on the front display: green light, yellow light, red light.
  - When the remaining time is greater than 68% of the set time, the green light will turn on to remind the user that the countdown has started and there is plenty of time left.
  - When the remaining time is between 68% and 95% of the set time, the yellow light will turn on to remind the user that there is not too much time left.
  - When the remaining time is at 95% of the set time, the red light will turn on to remind the user that the countdown is approaching. The red light will start blinking 5 seconds before the end of the timing to alert the user.
  - When the time is up, the user will hear the beeping sound, and the coloured buttons will blink. The beeping sound will automatically stop after 1 minute and the display will return to the last set time.
- When 00:00 is displayed, the user can also press the Start/Pause button to start positive timing, which can last up to 60 minutes.

# Information for Use



## Care and maintenance instructions:

- Wipe gently with a soft dry cloth.
- Do not submerge in water.
- If you do not intend to use your Digital Visual Timer for more than 1 year, fully charge it and then turn it off before storage.
- Store in a cool dry location.



Made in China



Imported by Bing International Ltd, Unit 14, Elgar Business Centre, WR2 6NJ on behalf of  
Sensory Direct (UK) Ltd, Unit 65c, Blackpole Trading Estate West, Worcester, WR3 8TJ, UK.  
[www.sensorydirect.com](http://www.sensorydirect.com)